

IMPORTANT INSTRUCTIONS FOR SAFE USE!

Do not use the device before reading the detailed instructions.

Pay special attention to the critical points below.

GENERAL CRITICAL INSTRUCTIONS

- Do not leave the device unattended when it is in operation.
- If for any reason you notice an unusual increase in the temperature of the device beyond the normal limits or production of dark steam/smoke:
 - 1) Keep distance from any flammable materials.
 - 2) Disconnect the battery.
 - 3) Place the device upright on a horizontal fireproof surface away from flammable materials.
 - 4) Ideally plug the nozzle of the device with a piece of wet cloth or paper.
 - 5) Allow the device to cool down before opening the lid.

CRITICAL INSTRUCTIONS WHEN USING ANEL COOL SMOKE PELLETS (CS)

- Shake the device **gently** every 5-10 minutes to mix the pellets inside.
- Do not leave the device idle - without stirring/blowing - for more than 30 minutes.
- If you are not going to use the device for more than 30 minutes, disconnect the battery.
- Before emptying the device make sure that both the device and the contents are at ambient temperature.
- Collect the used CS pellets in a fireproof (e.g. metal) container and keep them away from flammable materials until you are sure there is no source of heat. You can use water to cool them.

Specially during the high for fire risk days

- Do not use a newly charged battery with used CS when more than 30% of them are black.
- Especially during the high fire risk months, when more than 50% of CS pellets are black, replace them with new CS pellets.